



Official Lane Maintenance and Capital Equipment Provider

DIRECT+ Conditioning System

X ENVOY

X AUTHORITY22

Select Machine

Pattern Information

Date: 6-Apr-22, Pattern Type: Sport, Pattern Difficulty: Medium, Pattern Designer: JS, Pattern Volume (ml): 28,50

Surface Information

Surface Type: Synthetic, Surface Brand: Brunswick Pro Lane, Age:

Pattern Parameters

Pattern Number: , Pattern Name: SM Liiga Tali, Mode: Clean & Oil, Forward Speed: Quick Clean, Start Cleaner Spray: , Start Squeegee: , Start Oiling: , Split Pattern:


Supplies Information

Lane Cleaner: Judge, Cleaner Mixture Ratio: : 1, Cleaner Transition Distance: Authority22, Cleaner Spray End Distance: 51, Envoy, Lane Conditioner: Logic

Notes

Table with 8 columns (Zone 1-8) and 3 rows (Zone End Distance, Zone Ratio L/R, Zone Volume (ml)).

Table with columns for ZONE (1-8), 7 Pin Side (L1-L17), Board Number (L18-L19, C20, R19-R17, R16-R15, R14-R13, R12-R11, R10-R9, R8-R7, R6-R5, R4-R3, R2-R1), and 10 Pin Side (R10-R9, R8-R7, R6-R5, R4-R3, R2-R1).

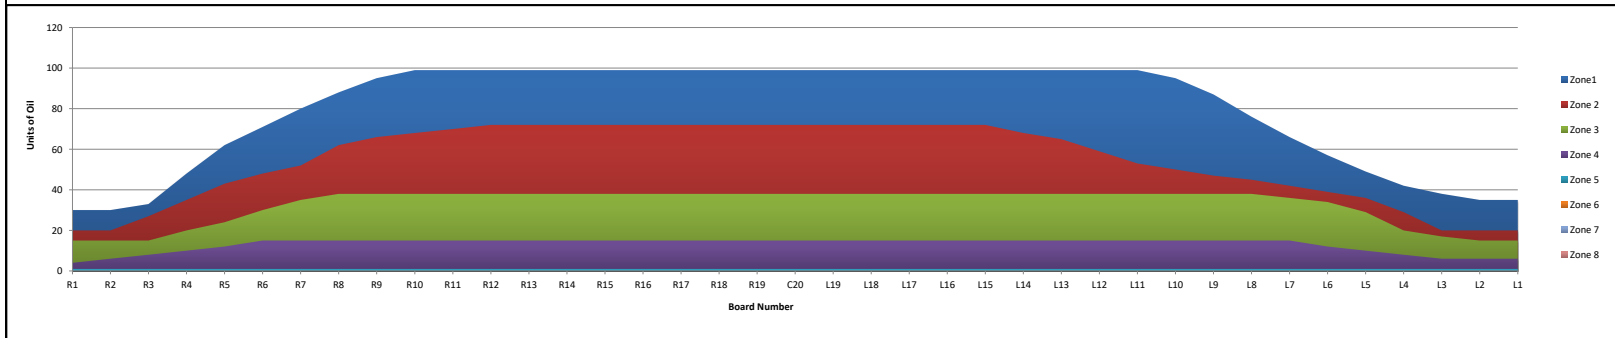



**ENVOY AUTHORITY22**

## SM Liiga Tali


### Crosswise Ratios (by units)

Zone 1 Average Ratio				Zone 5 Average Ratio			
3L-7L	Left =	50,4	1,9	3L-7L	Left =	1,0	1,0
3R-7R	Right=	58,8	1,6	3R-7R	Right=	1,0	1,0
18L-18R	Center =	99,0		18L-18R	Center=	1,0	
Zone 2 Average Ratio				Zone 6 Average Ratio			
3L-7L	Left =	33,2	2,1	3L-7L	Left =	#####	#####
3R-7R	Right=	41,0	1,7	3R-7R	Right=	#####	#####
18L-18R	Center=	72,0		18L-18R	Center=	#####	
Zone 3 Average Ratio				Zone 7 Average Ratio			
3L-7L	Left =	27,2	1,3	3L-7L	Left =	#####	#####
3R-7R	Right=	24,8	1,5	3R-7R	Right=	#####	#####
18L-18R	Center=	38,0		18L-18R	Center =	#####	
Zone 4 Average Ratio				Zone 8 Average Ratio			
3L-7L	Left =	10,2	1,4	3L-7L	Left =	#####	#####
3R-7R	Right=	12,0	1,2	3R-7R	Right=	#####	#####
18L-18R	Center =	15,0		18L-18R	Center=	#####	

### Crosswise Ratios (by ml)

Zone 1 Average Ratio				Zone 5 Average Ratio			
3L-7L	Left =	0,275	1,9	3L-7L	Left =	0,000	#####
3R-7R	Right=	0,320	1,6	3R-7R	Right=	0,000	#####
18L-18R	Center =	0,539		18L-18R	Center=	0,000	
Zone 2 Average Ratio				Zone 6 Average Ratio			
3L-7L	Left =	0,097	2,1	3L-7L	Left =	0,000	#####
3R-7R	Right=	0,120	1,7	3R-7R	Right=	0,000	#####
18L-18R	Center=	0,211		18L-18R	Center=	0,000	
Zone 3 Average Ratio				Zone 7 Average Ratio			
3L-7L	Left =	0,080	1,3	3L-7L	Left =	0,000	#####
3R-7R	Right=	0,073	1,5	3R-7R	Right=	0,000	#####
18L-18R	Center=	0,111		18L-18R	Center =	0,000	
Zone 4 Average Ratio				Zone 8 Average Ratio			
3L-7L	Left =	0,034	1,4	3L-7L	Left =	0,000	#####
3R-7R	Right=	0,040	1,2	3R-7R	Right=	0,000	#####
18L-18R	Center =	0,050		18L-18R	Center=	0,000	

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

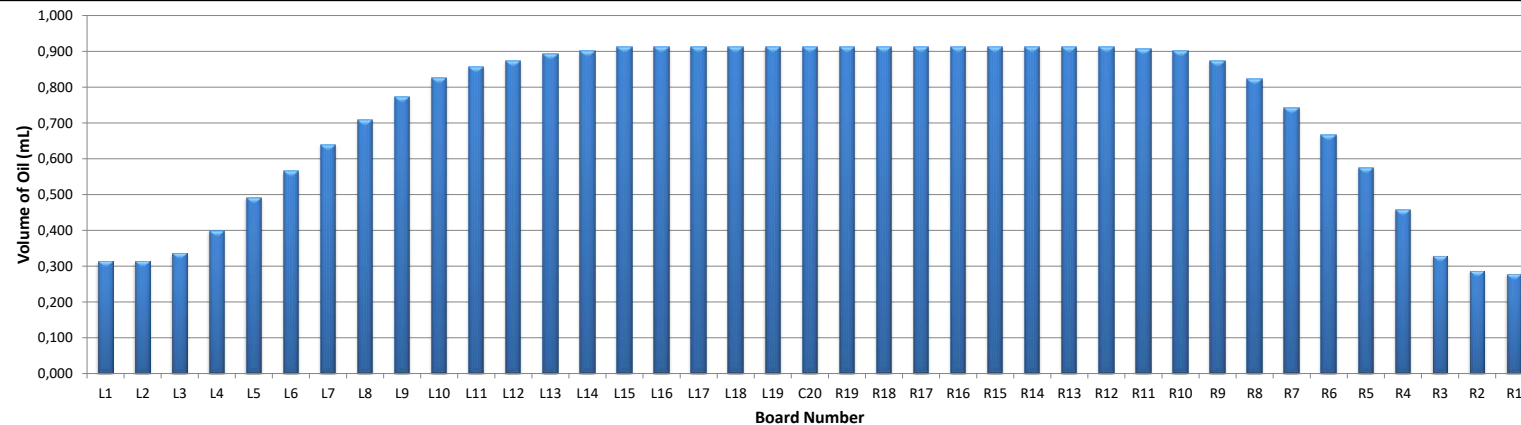

3L-7L:18L-18R	Ratio by Total Volume	18L-18R:7R-3R
1,88	1	1,65

