



Official Lane Maintenance and Capital Equipment Provider



ENVOY



AUTHORITY22®

Select Machine

Pattern Information

Date: 9-Mar-18
 Pattern Type: Competitive
 Pattern Difficulty: Medium
 Pattern Designer: Brunswick/Teemu Asplund
 Pattern Volume (ml): 22,49
 Surface Information
 Surface Type: Synthetic
 Surface Brand: Brunswick Pro Lane
 Age:

Pattern Parameters

Pattern Number:
 Pattern Name: SM-Liiga Tali
 Mode: Clean & Oil
 Forward Speed: Heavy Clean (Envoy)
 Start Cleaner Spray: 0
 Start Squeegee: 0
 Start Oiling: 6
 Split Pattern: No


Supplies Information

Lane Cleaner: Judge
 Cleaner Mixture Ratio: : 1
 Cleaner Transition Distance: Authority22
 Cleaner Spray End Distance: 53 Envoy
 Lane Conditioner: Defy v30

Notes

Zone	1	2	3	4	5	6	7	8
Zone End Distance	14	21	29	33	38			
Zone Ratio	L 3,4 : 1	3,5 : 1	3,3 : 1	3,3 : 1	1,0 : 1	### : 1	### : 1	### : 1
	R 3,4 : 1	3,5 : 1	3,3 : 1	3,3 : 1	1,0 : 1	### : 1	### : 1	### : 1
Zone Volume (ml)	12,09	4,82	4,19	1,39	0,00	0,00	0,00	0,00

ZONE	7 Pin Side														Board Number					10 Pin Side																				
	L1	L2	L3	L4	L5	L6	L7	L8	L9	L10	L11	L12	L13	L14	L15	L16	L17	L18	L19	C20	R19	R18	R17	R16	R15	R14	R13	R12	R11	R10	R9	R8	R7	R6	R5	R4	R3	R2	R1	
1	35	30	25	20	15	27	39	51	63	75	70	65	60	55	50	60	70	80	90	100	90	80	70	60	50	55	60	65	70	75	63	51	39	27	15	20	25	30	35	
2	28	24	20	16	12	21	30	40	50	60	56	52	48	44	40	48	56	64	72	80	72	64	56	48	40	44	48	52	56	60	50	40	30	21	12	16	20	24	28	
3	22	19	16	13	10	17	24	31	38	45	42	39	36	33	30	36	42	48	54	60	54	48	42	36	30	33	36	39	42	45	38	31	24	17	10	13	16	19	22	
4	15	13	11	9	7	11	14	20	25	30	28	26	24	22	20	24	28	32	36	40	36	32	28	24	20	22	24	26	28	30	25	20	15	11	7	9	11	13	15	
5	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
6																																								
7																																								
8																																								

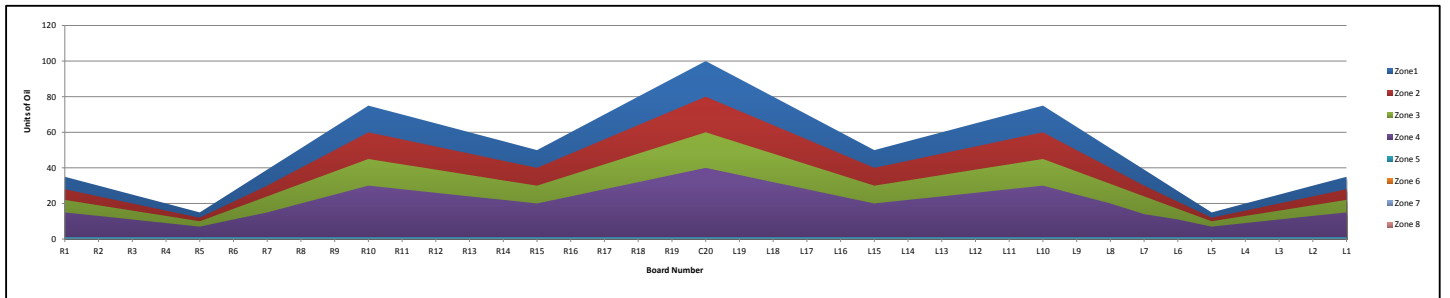



SM-Liiga Tali

**Crosswise Ratios
(by units)**

Zone 1 Average Ratio				Zone 5 Average Ratio			
3L-7L	Left =	25,2	3,4	3L-7L	Left =	1,0	1,0
3R-7R	Right=	25,2	3,4	3R-7R	Right=	1,0	1,0
18L-18R	Center =	88,0		18L-18R	Center=	1,0	
Zone 2 Average Ratio				Zone 6 Average Ratio			
3L-7L	Left =	19,8	3,5	3L-7L	Left =	#####	#####
3R-7R	Right=	19,8	3,5	3R-7R	Right=	#####	#####
18L-18R	Center=	70,4		18L-18R	Center=	#####	
Zone 3 Average Ratio				Zone 7 Average Ratio			
3L-7L	Left =	16,0	3,3	3L-7L	Left =	#####	#####
3R-7R	Right=	16,0	3,3	3R-7R	Right=	#####	#####
18L-18R	Center=	52,8		18L-18R	Center =	#####	
Zone 4 Average Ratio				Zone 8 Average Ratio			
3L-7L	Left =	10,4	3,3	3L-7L	Left =	#####	#####
3R-7R	Right=	10,6	3,3	3R-7R	Right=	#####	#####
18L-18R	Center =	35,2		18L-18R	Center=	#####	

**Crosswise Ratios
(by ml)**

Zone 1 Average Ratio				Zone 5 Average Ratio			
3L-7L	Left =	0,148	3,4	3L-7L	Left =	0,000	#####
3R-7R	Right=	0,148	3,4	3R-7R	Right=	0,000	#####
18L-18R	Center =	0,516		18L-18R	Center=	0,000	
Zone 2 Average Ratio				Zone 6 Average Ratio			
3L-7L	Left =	0,058	3,5	3L-7L	Left =	0,000	#####
3R-7R	Right=	0,058	3,5	3R-7R	Right=	0,000	#####
18L-18R	Center=	0,207		18L-18R	Center=	0,000	
Zone 3 Average Ratio				Zone 7 Average Ratio			
3L-7L	Left =	0,054	3,3	3L-7L	Left =	0,000	#####
3R-7R	Right=	0,054	3,3	3R-7R	Right=	0,000	#####
18L-18R	Center=	0,177		18L-18R	Center =	0,000	
Zone 4 Average Ratio				Zone 8 Average Ratio			
3L-7L	Left =	0,017	3,3	3L-7L	Left =	0,000	#####
3R-7R	Right=	0,018	3,3	3R-7R	Right=	0,000	#####
18L-18R	Center =	0,059		18L-18R	Center=	0,000	

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

